

DAF OVER THE AIR

IMMER AKTUELL. EINFACH VERBUNDEN.



WAS IST „DAF OVER THE AIR“?

Mit DAF Over the Air (OTA) erhält Ihr Fahrzeug Software-Updates automatisch und drahtlos – ganz ohne Werkstattbesuch.

So bleibt Ihr DAF immer auf dem neuesten Stand in Bezug auf:

- ✓ Fahrzeugsoftware
- ✓ Sicherheitsupdates
- ✓ Optimierungen für Leistung und Effizienz
- ✓ Neue Funktionen und Verbesserungen



VORTEILE FÜR DEN FAHRER



Keine unnötigen
Werkstattaufenthalte



Updates bequem über
Mobilfunk/WLAN



Kürzere
Standzeiten



Verbesserte
Fahrzeugleistung



Mehr Sicherheit und
Zuverlässigkeit

SO FUNKTIONIERT'S

1

UPDATE-BENACHRICHTIGUNG ERHALTEN



Im Fahrerdisplay erscheint eine Meldung, dass ein neues Update verfügbar ist.

2

FAHRZEUG SICHER ABSTELLEN



- Fahrzeug auf sicherem Platz abstellen
- Feststellbremse aktivieren
- Motor ausschalten
- Ausreichende Batteriespannung sicherstellen

3

UPDATE STARTEN



Im Display:
„Update starten“ auswählen
Hinweise auf dem Bildschirm beachten.

4

WÄHREND DES UPDATES



Wichtig:

- ⚠ Fahrzeug nicht bewegen
- ⚠ Zündung nicht ausschalten
- ⚠ Update nicht unterbrechen

Die Dauer kann je nach Update variieren.

5

UPDATE ABGESCHLOSSEN



Nach erfolgreicher Installation erscheint eine Bestätigung im Display.

- ✓ Fahrzeug ist wieder einsatzbereit



WICHTIGE HINWEISE

- Einige Updates können nur im Stand durchgeführt werden
- Bei Problemen kontaktieren Sie Ihren DAF Servicepartner
- Für OTA muss die Fahrzeugverbindung aktiv sein



FRAGEN ODER UNTERSTÜTZUNG?

Kontaktieren Sie Ihren DAF Servicepartner
www.daf.com

DAF
DRIVING EFFICIENCY

DAF OVER THE AIR

ALWAYS UP TO DATE. SIMPLY CONNECTED.



WHAT IS DAF OVER THE AIR?

With DAF Over the Air (OTA), your vehicle receives software updates automatically and wirelessly – with no need to visit a workshop.

This keeps your DAF up to date with:

- ✓ Vehicle software
- ✓ Security updates
- ✓ Performance and efficiency improvements
- ✓ New features and enhancements

BENEFITS FOR THE DRIVER



No unnecessary workshop visits



Updates conveniently over mobile network/Wi-Fi



Reduced downtime



Improved vehicle performance



More safety and reliability

HOW IT WORKS

1

RECEIVE UPDATE NOTIFICATION



A message appears in the driver display that a new update is available.

2

PARK THE VEHICLE SAFELY



- Park the vehicle in a safe place
- Apply the parking brake
- Switch off the engine
- Ensure sufficient battery voltage

3


START THE UPDATE



On the display:
Select "Start update"
and follow the instructions on the screen.

4

DURING THE UPDATE

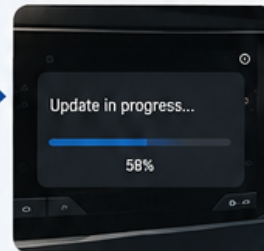

Important:

- ⚠ Do not move the vehicle
- ⚠ Do not switch off the ignition
- ⚠ Do not interrupt the update

The duration may vary depending on the update.

5

UPDATE COMPLETED



After successful installation, a confirmation appears in the display.

- ✓ The vehicle is ready to drive again.



IMPORTANT NOTES

- Some updates can only be performed when the vehicle is stationary
- If you encounter any issues, contact your DAF Service Partner
- For OTA, the vehicle connection must be active



QUESTIONS OR SUPPORT?

Contact your DAF Service Partner
www.daf.com

DAF
DRIVING EFFICIENCY